

2025



Counter Scales
Self-Service Scales
Checkout Scales
Displays
Weigh Price Labeling
Scale Management
Applications
Services



Weighing Technology and Accessories for Food Retailers

METTLER TOLEDO

Perfectly Placed

Your Partner in Fresh Food Management

METTLER TOLEDO supports food retailers with powerful solutions for weighing, wrapping and labeling along the entire value chain – from highly efficient automatic weighing, wrapping and pricing in the backroom to quick service and support processes at the sales counters, and in specialty areas as well as immediate checkout at the cash register.



Backroom

METTLER TOLEDO weighing, wrapping and labeling solutions for the backroom are powerful, durable and easy to clean. They support the integration into the IT system, traceability and nutritional value information.

Fresh Food Counter

Perfect customer service at service counters: METTLER TOLEDO counter scales are the ideal platform for sales-boosting, networked applications – from price and item maintenance to product information for customers.

Fruit and Vegetables

METTLER TOLEDO Self-Service Scales with applications for displaying sales-boosting promotions and consumer information that shorten checkout time and improve profitability.

Bakery

METTLER TOLEDO weighing and labeling solutions are absolutely ideal for the high quantity and volume requirements in bakeries, and ensure perfect product presentation for expensive confectionery shop items.

Cash Register Area

Whether checkout scales with market-leading POS and scanner functionality or basic scales for weighing, METTLER TOLEDO checkout solutions boost efficiency and minimize waiting time at checkout.

Specialty Zones

METTLER TOLEDO solutions for mobile sales: Portable compact scales and counter scales with cash register functions and integrated payment systems ensure sales success beyond the checkout area.

	Counter Scales	8–27
	FreshWay Line	8–19
	FreshBase Line	20–23
	FreshAI	24–27
	Basic Scales	30–49
	bTouch	30–33
	bPlus Line	34–37
	bDrive and bMobile	38–43
	bRite Line	44–49
	Checkout Scales and Displays	52–57
	Ariva Line	52–53
	Ariva Display Options	54–55
	Ariva	56–57
	Wrapping and Price Labeling	60–63
	FreshPack and 840	60–61
	FreshPack	62–63
	840	64–65
	Software and Scale Management	68–71
	RetailSuite – Module Review	68–69
	METTLER TOLEDO RetailSuite	70–71
	Service	74–75
	Service Solutions	74
	Preventive Maintenance	75

Counter Scales




	Page
FreshWay Line	8–19
FreshBase Line	20–23
FreshAI	24–27

FreshWay Line

Freshen Up Your Front Line







The first choice for leading food retailers. FreshWay combines award-winning design and open PC technology with perfect weighing and operating convenience at the POS.

► www.mt.com/retail-fresh



For Bottom Line Results

Take a look at the FreshWay video:
► www.mt.com/freshway

	FreshWay T	FreshWay T Double Printer	FreshWay V	FreshWay C	FreshWay H	FreshWay Kiosk
						
Weighing Range	3 kg / 6 kg	6 kg / 15 kg	3 kg / 6 kg	6 kg / 15 kg*	6 kg / 15 kg*	6 kg / 15 kg*
Graduation	1 g / 2 g	2 g / 5 g	1 g / 2 g	2 g / 5 g	2 g / 5 g	2 g / 5 g
Min Load	20 g	40 g	20 g	40 g	40 g	40 g
Operator Display	12.1-inch (30.7 cm) capacitive TFT touchscreen with LED backlight technology, 1,024 × 768-pixel screen resolution, vertical infinitely adjustable tilt angle Optional 15.6-inch (39.6 cm) display available, 1,366 × 768-pixel screen resolution			15.6-inch (39.6 cm) capacitive TFT touchscreen with LED backlight, 1,366 × 768-pixel screen resolution, continuous tilt angle adjustments		12.1-inch (30.7 cm) capacitive TFT-Touchscreen with LED backlight technology, 1,024 × 768-pixel screen resolution. Optional 15.6-inch (39.6 cm) display available, 1,366 × 768-pixel screen resolution. Optional barcode scanner.
Customer screen	Optional 12.1-inch (30.7 cm) in LED backlight technology, 1,024 × 768-pixel screen resolution, vertical infinitely adjustable tilt angle Optional 15.6-inch (39.6 cm) display available, 1,366 × 768-pixel screen resolution			N/A		Optional 12.1-inch (30.7 cm) in LED backlight technology, 1,024 × 768-pixel screen resolution; Optional 15.6-inch (39.6 cm) display available, 1,366 × 768-pixel screen resolution
Printer	2-inch ticket printer, optional 2-inch linerless printer, max. roll diameter of 70 mm (ticket printer), max. 120 mm (linerless printer), cutter for automatic paper cutting, printing speed of up to 150 mm/sec. Double printer option			Printer options include: 3-inch linerless or label printer; Double printer option		Printer options include: 2-inch ticket, label, or linerless printer; 3-inch label or linerless printer
Standard Design	Counter Scale in Tower Design		Processor and weighing plate in a single housing, with free placement of the function modules	Counter Scale in Compact Design		Kiosk and Printer in Compact Design
Model Versions	Also available as self-service scale without a customer display		Flat Edition: processor and ultra-thin weighing plate can be placed in separate locations	N/A		N/A
Dimensions (W × D × H)	415 × 442 × 501 mm		Standard Design: 380 × 290 × 64 mm Flat Edition: processor 380 × 290 × 64 mm, weighing plate 351 × 276 × 26.5 mm	545 × 533 × 183 mm		294 × 123 × 291 mm
Wrapping	★★★★☆		★★★★☆	★★★★☆		★★★★★
Service Counter	★★★★★		★★★★★	★★★★★		★★★★★
Self-Service Weighing **	★★★★★		★★★★★	★★★☆☆		★★★☆☆
Checkout	★★★★☆		★★★★☆	★★★★☆		★★★☆☆

Suitability for requirements: ★★★★★ very well-suited ★★★★☆ well-suited ★★★☆☆ suitable ★★★☆☆ limited suitability
★★★★☆ unsuitable * Basic module and CWP weighing plate ** optional self-service version

FreshWay T

Open – Top-Quality – Versatile

FreshWay Tower gives food retailers access to powerful and sustainable state-of-the-art weighing technology. High-quality components ensure maximum weighing and operating convenience for employees and customers - while also providing impressive reserve capacities for demanding processing and graphics applications.

► www.mt.com/retail-fresh

Pioneering Design

FreshWay T sets the benchmark for effectiveness at POS with its timeless, modern design – recipient of the international Red Dot: Best of the Best Award. The scale's clean, contemporary design reduces visual barriers to create an open sales environment.



Seamless Integration



Whether at the service counter, for self-service weighing in fresh food departments, or in checkout applications, standard interfaces and open PC technology support the complete integration of FreshWay T into established operating processes and the goods management system.

Sales-Boosting POS Advertising



The FreshWay T includes a powerful processor and large, bright customer screen to provide the perfect platform for advertising and brand campaigns at the POS – from weekly special offers to profitable cross-selling campaigns.

Innovative Housing Concept



The FreshWay T design focuses on ergonomics, functionality and hygiene to support employees in their everyday sales activities. Versatile equipment options ensure flexibility and individual adaptation to the sales environment.

Investment Security and Versatility

Easy transition to the FreshWay Line: all scales in the line can be used in a mixed environment with METTLER TOLEDO scales from the UC Line and UC Evo Line. The UC3 scale software ensures high-quality performance with its reliability, system stability, and wide range of functions.

Product Benefits

- Award-winning design for a perfect customer-focused presence
- Open PC interfaces and high-end components
- Easy and seamless integration into goods management
- Flexible adjustment to the individual weighing application
- Full-feature, reliable scale software
- Easy migration
- Optional 2-inch linerless or ticket printer
- Can be administered using the METTLER TOLEDO RetailSuite

FreshWay V

Innovative – Versatile – Modular

FreshWay Vario and its freely positionable components give food retailers unique freedom to develop a sales- and service-optimized counter and checkout design. FreshWay V makes it easy to adjust the weighing and operation to the individual requirements of the specific sales environment.

► www.mt.com/retail-fresh

Perfect Customer Service

By combining ease-of-use with ergonomic, subtle placement of the printer unit on the counter, the modular FreshWay V concept has everything you need to integrate the weighing technology into the shop design. FreshWay V paves the way for a perfect shopping experience.



Sustainable Shopfitting



Whether in the standard design or with an ultra-thin scale in the Flat Edition, FreshWay V does not require any permanent structural recesses in the counter. This permanently reduces the risk of high follow-up costs caused by subsequent changes to the sales counter.

Customized Assembly



FreshWay V is compatible with the highly stable and versatile assembly and mounting systems from Ergonomic Solutions®. This ensures maximum flexibility for custom integration of the scale into the specific work environment.

Modular Diversity



The FreshWay V housing concept enables free placement of the user screen, customer display, printer unit, weighing plate, and processor. Other options, such as linerless printers, fine-tune the adjustment to the specific operating requirements.

Permanently and Securely Connected

All scales in the FreshWay Line operate without fans and dissipate waste heat via the housing, which saves energy and means that no maintenance is required. The cable connections are protected against accidental disconnection, such as when cleaning the workstation. Optional WLAN ensures the network connection without LAN wiring.

Product Benefits

- Modular concept for maximum flexibility in weighing and checkout areas
- Easy and sustainable component assembly
- Flattest stand-alone weighing plate in its performance class
- Open PC interfaces and high-end components
- Easy and seamless integration into goods management
- Full-feature, reliable scale software
- Can be administered using the METTLER TOLEDO RetailSuite

FreshWay C

Convenient – Compact – Accurate

FreshWay Compact features a sleek, low-profile design that saves on counter space and a large touchscreen display that makes operation easy and convenient. The adjustable angle of the display ensures increased accuracy and optimal legibility for operators. A custom-designed array of weighing features assures high performance for a multitude of applications.

► www.mt.com/retail-fresh

Sleek Ergonomic Design

The large 15.6" touchscreen display of the FreshWay C has an adjustable vertical tilt angle of up to 30°, supporting ergonomic use for operators as well as increased productivity.



Durable Housing



Impact-resistant aluminum housing with a non-stick surface protects the FreshWay C scale against spills, acids, salts, and fats. This makes it ideal for longterm usage, even in high-demanding retail conditions.

Versatile Printing



The FreshWay C provides a variety of printing options to suit your retail counter needs, including a 3" label printer, a 3" linerless printer, and dual printing capability. This flexibility enables the FreshWay C to adapt to changing printing needs.

Innovative Housing Concept



The user interface of the FreshWay C offers simplified operation with scale software that is user-friendly for both new employees and experienced operators. Less training time means lower costs and more time for high-quality customer service.

A Future-Proof Investment

The PC-based FreshWay C is a fresh, future-proof way for food retailers to meet the needs of today's most demanding weighing environments. A custom-designed array of weighing features assures high performance for a multitude of applications.

Product Benefits

- Compact design saves on counter space
- Open PC interfaces and high-end components
- Easy and seamless integration into goods management
- Full-feature, reliable scale software
- Easy migration
- Can be administered using the METTLER TOLEDO RetailSuite

FreshWay H

Optimize Space – Increase Sales

The robust, high-performance design of the FreshWay H ensures future-proof, state-of-the-art weighing technology for even the most demanding retail environments. The ergonomic design benefits service staff with easy and convenient operation, helping simplify and optimize customer interactions.

► www.mt.com/retail-fresh

Durable Housing

Impact-resistant aluminum housing with a nonstick surface protects the FreshWay H scale against spills, acids, salts, and fats. This makes it ideal for long-term usage, even in highly demanding retail conditions.



Ergonomic Operation



The large display and simple, responsive operation of the FreshWay H make the scale both ergonomic and easy to use for employees. This ensures fast, error-free weighing and operating processes, even at peak times.

Sales-Boosting Design



The FreshWay H enables in-store marketing with high power reserves that support graphics-intensive digital signage campaigns at the POS. The bright 15.6" customer display can increase your bottom line with sales-boosting promotions.

Wide Range of Printer Units



The FreshWay H hanging scale is available with various printer units for tickets and labels. The optional 2" label printer is ideal for printing certificates of origin and practical preparation tips.

Next generation PC hanging scale

The PC-based FreshWay H hanging scale allows retailers to maximize counter space while effectively promoting products to customers. FreshWay H combines the advantages of a space-saving hanging scale with the benefits of a large 15.6" customer display screen that can be leveraged to boost sales.

Product Benefits

- Open PC interfaces and high-end components
- Easy integration into goods management
- Full-feature, reliable scale software

FreshWay Kiosk

Improve Flexibility

The FreshWay Kiosk is a fresh, future-proof way for retailers to meet the needs of an array of grocery applications. From ticket printing for the floral department or bakery, to backroom prepackaging solutions, FreshWay Kiosk offers a solution to an array of food retail needs without a weighing platform.

► www.mt.com/retail-fresh

Versatility

Bakeries, deli counters, floral departments and backrooms: FreshWay Kiosk offers a multitude of applications that serve to improve customer experience, streamline operations and enhance data collection.



Compact Design



The FreshWay Kiosk offers streamlined ticket printing functionality in a compact design. Benefit from dynamic real-time product and pricing information and asset management with a customizable and intuitive customer interface.

Enhanced Printing



The FreshWay Kiosk provides a variety of printing options to suit your retail counter needs, including a 2" label printer, a 3" linerless printer, and remote mounting. This flexibility enables the FreshWay Kiosk to adapt to changing printing needs based on application.

Intuitive Software



The user interface of the FreshWay Kiosk offers simplified operation with UC3 software, which is user-friendly for both new employees and experienced operators. Less training time means lower costs and more time for highquality customer service.

Future-Proof Functionality

Ticket printing, label printing, kiosk terminal info sharing and digital marketing are just a few of the many capabilities of the future-proof FreshWay Kiosk.

Product Benefits

- Offers a solution to an array of retail needs without a weighing platform
- Provides a variety of printing options to suit your retail needs

FreshBase Line

Smart Weighing with Touch Convenience






The ideal touchscreen scale for price-conscious food retailers.

www.mt.com/retail-freshbase



Everything is Easier. We Call it “In-Store Happiness”.

Take a look at the FreshWay video:
www.mt.com/freshbase

	<div>FreshBase T with Customer Display Powerful counter scale ideal for service counters in supermarkets, butcher shops and delicatessens.</div> <div></div> <div><ul style="list-style-type: none">• Fast and reliable customer service at all service counters• Bright customer screen for attention-grabbing advertising• Connections securely protected against the entry of water and dirt• Also available with a linerless printer in the basic housing</div>	<div>FreshBase T with Customer Display and Double Printer Multifunctional counter scale that combines over-the-counter sales and wrapping for self-service displays in a combination device.</div> <div></div> <div><ul style="list-style-type: none">• Easy switching between ticket and label printing via touch typing• No roll replacement required• Wrapping at the counter during quiet times• Also available with a second printer with linerless and autocut function</div>	<div>FreshBase T without Customer Display Intuitive and easy-to-use self-service scale with convenient and ergonomic touchscreen operation.</div> <div></div> <div><ul style="list-style-type: none">• Strategic placement of the on/off button on the underside to prevent any unauthorized shut-down.• Easy and residue-free label removal thanks to the anti-adhesive coating</div>	<div>FreshBase C with Customer Display Durable and powerful compact scale, ideal for hot food counters and sales in environments with limited space.</div> <div></div> <div><ul style="list-style-type: none">• Flat, compact design without any disruptive visual barriers to the customer• Quick, easy access to products in the goods display• Also available with a linerless printer in the basic housing</div>	<div>FreshBase C Printing Terminal Non-weighing terminal perfect for fresh goods sold by piece.</div> <div></div> <div><ul style="list-style-type: none">• Perfect for labeling piece articles• Works together in the network with all other METTLER TOLEDO network scales• MTRS integration</div>
Weighing Range	3 kg / 6 kg6 kg / 15 kg15 kg12 kg*	6 g / 15 kg15 kg	6 kg / 15 kg15 kg	3 kg / 6 kg6 kg / 15 kg15 kg	–
Graduation	1 g / 2 g2 g / 5 g5 g2 g	2 g / 5 g5 g	2 g / 5 g5 g	1 g / 2 g2 g / 5 g5 g	–
Min Load	20 g40 g100 g40 g	40 g100 g	40 g100 g	20 g40 g100 g	–
Wrapping	★★★★☆	★★★★★	★★★★★	★★★★★	★★★★★
Service Counter	★★★★★	★★★★★	☆☆☆☆☆	★★★★★	☆☆☆☆☆
Self-Service Scales	★★☆☆☆	★★★★☆	★★★★★	★★☆☆☆	☆☆☆☆☆
Checkout	★★★★★	★★★★★	☆☆☆☆☆	★★★★★	☆☆☆☆☆

Suitability for requirements:★★★★★ very well-suited★★★★☆ well-suited★★★★☆ suitable☆☆☆☆☆ unsuitable

* Basic module and CWP weighing plate

☆☆☆☆☆ limited suitability

FreshBase

Easy – Durable – Functional

The FreshBase scale line combines fast weighing and operation, thanks to interactive touchscreen convenience, with the established functionality of METTLER TOLEDO scale software. Durable design and high-quality components ensure high device functionality and long service life for food retailers.

► www.mt.com/retail-freshbase

Smart Entry into the Touchscreen Class

FreshBase is the perfect choice for food retailers looking at an entry-level model for weighing and operation with touchscreen convenience. Applications include over-the-counter sales at the supermarket, in delicatessens, and the butcher's shop. FreshBase also excels at wrapping for self-service displays, sales at hot food counters, and self-service weighing in the fresh food department.



Robust Housing



Die-cast aluminum housing, ABS polymer lining, and anti-adhesive coating make FreshBase resistant against acids, greases and dirt, as well as extremely resilient against high mechanical loads.

Easy to Operate



FreshBase supports employees with its easy-to-use touchscreen convenience functions. New sales and part-time staff can quickly learn operation of the scale, ensuring fast, flawless customer service.

Proven Multifunctionality



FreshBase's range of functions in its scale software is based on METTLER TOLEDO's expertise and extensive experience in food retailing. All FreshBase scales can be easily integrated into existing ERP solutions.

Reliable and Resource-Friendly

FreshBase excels in everyday sales activities thanks to its advanced Embedded Systems technology with low power consumption, outstanding system stability, and fast computing processes. FreshBase is a secure, sustainable investment decision for food retailers.

Product Benefits

- Extensive range of models
- High-quality components
- Touchscreen Convenience
- Rapid ticket roll replacement
- Proven scale software
- Easy integration into the existing operating environment
- Sustainable: Green MT
- Durable housing
- Protected connections
- Easy service and maintenance
- Can be administered using the METTLER TOLEDO RetailSuite

FreshAI

Smart Item Recognition

COMING SOON

FreshAI enhances self-service weighing applications – in the produce department and beyond – with automatic item identification.

www.mt.com/retail-freshAI



Learn more about the capabilities of FreshAI by watching this video:
www.mt.com/retail-freshAI

Watch the FreshAI Video

Learn more about the capabilities of FreshAI by watching this video:
www.mt.com/retail-freshAI

FreshAI



Operator Display	12.1 inch capacitive touchscreen; Screen resolution: 1,024 × 768 pixels Optional 15.6 inch display available; Screen resolution: 1,366 × 768 pixels		
Camera	2.1 Megapixel CMOS camera; automatic adjustment of key parameters Industrial-grade, robust metal housing with hidden cables		
Printer	Pole-mounted: 2-inch ticket, label, or linerless; 3-inch linerless Remote-mounted: 3-inch ticket or linerless Printing speed: up to 150 mm/s Print resolution: 8 dots/mm		
Dimensions (W × D × H)	446 × 424 × 567 mm		
CPU	Intel® quadcore processor		
Data Storage	8 GB RAM 128 GB Flash		
Operating System	Microsoft Windows; Linux openSUSE Leap 15 64-bit		
Weighing Range	Single Range	30 kg	
	Graduation	5 g	
	Minimum load	100 g	
	Dual Range	3 kg / 6 kg*	6 kg / 15 kg*
	Graduation	1 g / 2 g	2 g / 5 g
	Minimum load	20 g	40 g
			20 g



COMING SOON

FreshAI

Automatic – Fast – Accurate

FreshAI technology provides retailers with a fully-integrated, intelligent weighing solution that optimizes processes in order to improve efficiency, reduce costs, and achieve operational excellence – all while maintaining privacy, security, and data integrity.

► www.mt.com/retail-freshAI

Adaptability and Efficiency

FreshAI supports self-service weighing for key retail applications such as the fresh foods department. FreshAI gives retailers the ability to share image recognition learning results across stores, simplifying multi-store development and improving implementation efficiency.



Intuitive User Experience



FreshAI's interactive touchscreen navigation is user-friendly for customers, reducing item search times and simplifying product identification. Automatic, accurate identification of goods provides a seamless shopping experience to ensure convenience while keeping customer lines moving quickly.

Reduced Costs



Robust, high-quality components boost uptime and lengthen the device life cycle. The user-friendly interface minimizes the loss in sales related to customer frustrations in locating items. Auto-learning capabilities enable the software to "learn" new items simply via usage – no manual input by staff required.

Advanced Technology



Item recognition software works directly on-scale to support uptime – no need for ongoing network connectivity. Goods are identified automatically and shown as easily identifiable images on the display. The advanced software also tracks inventory usage to reduce shrink and improve inventory management.

Seamless Shopping Experience

The FreshAI smart item recognition system provides end-to-end intelligent weighing solutions for modern grocery retailers. Its impressive recognition capabilities are able to show the correct product in the top four items displayed on-screen with over 95% accuracy within only half a second!

Product Benefits

- Automatic item recognition system
- Enhances self-service weighing applications
- Over 95% accuracy in showing the correct product in top four items displayed on-screen
- Reduces item search times to keep customer lines moving quickly
- Ability to share image recognition learning results across stores
- Intuitive interface reduces sales losses related to customer frustrations in locating items
- Boosts uptime with software that works directly on-scale

Basic Scales



	Page
bTouch	30–33
bPlus Line	34–37
bDrive and bMobile	38–43
bRite Line	44–49

bTouch

Smart Touchscreen Weighing

Innovation meets durability with high-quality components for a long equipment life cycle and a thoroughly future-proof investment.

www.mt.com/retail-bTouch



Watch the bTouch Video

Learn more about the capabilities of bTouch by watching this video:

www.mt.com/retail-bTouch



Operator Display	15.6 inch capacitive touchscreen Screen resolution: 1,920 × 1,080 pixels		
Customer Display	7-inch customer display Screen resolution: 1,024 × 600 pixels Optional 15.6-inch customer display Screen resolution: 1,920 × 1,080 pixels		
Printer	Thermal printer for receipts, labels Printing speed: up to 125 mm/s Print resolution: 8 dots/mm Printable width: 56 mm Roll diameter: max. 120 mm		
Dimensions (L × P × H)	394 × 390 × 551 mm		
CPU	RK 3288 Quad-Core 1.8GHz		
Data Storage	2 GB DDR3 16 GB eMMC		
Operating System	MT Smart OS Embedded		
Weighing Range	Single Range	12 kg	15 kg
		30 g	
	Graduation	2 g	2 g
		5 g	
	Minimum load	40 g	100 g
		100 g	
Weighing Range	Dual Range	3 kg / 6 kg	6 kg / 15 kg
		15 kg / 30 kg	
	Graduation	1 g / 2 g	2 g / 5 g
		5 g / 10 g	
Weighing Range	Minimum load	20 g	40 g
		100 g	



bTouch

Robust – Powerful – Versatile

Rich functionality, superior quality and future-proof technology: bTouch is the new scale for grocery retailers who are looking to move into the performance class of convenient touchscreen weighing.

► www.mt.com/retail-bTouch

Intuitive Operation

With accurate weighing, fast printing and innovative technology, bTouch brings convenient and intuitive touchscreen operation to sales counters and open markets.



Highly Functional



With its intuitive GUI, powerful search and smooth operation, training new operators is easy and efficient. Your IT department is fully supported with customizations, remote access and other advanced features that enhance asset management, in-store advertising and operations.

Superior Quality



Durable even in the harshest conditions: bTouch eases through printing, weighing, and touchscreen control without losing quality. Designed with ultimate hygiene in mind, pests and insects are unable to penetrate the equipment and damage internal components.

Future-Proof Technology



Enhance customer loyalty and satisfaction. The modern, sleek design with large display improves any store's image. Optional features like the camera module help optimize performance.

Boost Uptime

With bTouch, retailers are choosing a thoroughly future-proof investment decision. Operators enjoy smooth processes, fast weighing feedback and rich functionality. Robust design and high-quality components boost operational uptime and lengthen equipment life cycle, even under the harshest conditions.

Product Benefits

- Touchscreen convenience plus high-performance scale application
- Rapid weighing process due to the interactive touchscreen user prompts
- High level of functionality and robustness of the rich METTLER TOLEDO scales software
- Simple integration into existing processes and environments (e.g. tools, inventory management)
- Green MT: Energy-saving and resource-effective embedded system
- High-quality components for a long life-cycle

bPlus Line

Future-Proof Weighing Technology

bPlus is ideal for retailers who are looking to invest in future-proof weighing technology that helps them focus on what matters: sales and profit. Every part of a METTLER TOLEDO bPlus scale is carefully designed to provide outstanding benefits.

► www.mt.com/retail-bplus



The bPlus Line:
Small details make
a big difference.

We know that every detail counts. Learn more about the bPlus line:
► www.mt.com/retail-bplus

bPlus-U2

Intuitive and easy to use counter scale with ergonomic display and touch screen.



- Adjustable LCD operator display and keypad overlay provide exceptional readability
- Adjustable, ergonomic keyboard takes up less space in tight spaces

bPlus-C2

Compact and reliable counter scale ideal for tight spaces



- Compact scale perfect for small spaces or narrow counter areas
- Hygienic design: die-cast aluminum housing with stainless steel tray

bPlus-H2

Hanging scale with label printer



- Light touch keyboard is easy to remove for cleaning
- Advertising on the customer side of the scale can easily be done by adding a magnetic picture to the scale housing

Weighing Range	6 kg / 15 kg	12 kg	15 kg / 30 kg	6 kg / 15 kg	15 kg / 30 kg	6 kg / 15 kg
Graduation	2 g / 5 g	2 g	5 g / 10 g	2 g / 5 g	5 g / 10 g	2 g / 5 g
Minimum Capacity	40 g	40 g	100 g	40 g	100 g	40 g
Keyboard	74 touch keys in total for fast operation 42 preset keys with 2 layers for assigning 84 PLUs or functions			74 touch keys in total for fast operation 42 preset keys with 2 layers for assigning 84 PLUs or functions		99 touch keys in total for fast operation 71 preset keys with 2 layers for assigning 142 PLUs or functions
Printer	Thermal printer for receipts, labels and linerless (optional) Roll width labels and linerless: 65 mm Printable width: 56 mm Roll diameter: 120 mm max.			Thermal printer for receipts, labels and linerless (optional) Roll width labels and linerless: 65 mm Printable width: 56 mm Roll diameter: 120 mm max.		Thermal printer for receipts and labels Roll width: 78 mm Printable width: 54 mm Roll diameter: 122 mm max.



Ensures the collection of required data in accordance with national and European regulations.

bPlus

Smart – Proven – Future-Proof

Fast and accurate weighing and service. bPlus is an ergonomic and dependable retail scale that will delight operators with its robustness, reliability and ease-of-use.

► www.mt.com/retail-bplus

bPlus is designed for all stores that place high demands on the quality and reliability of the equipment they work with. Its ingenious details and smart software will simplify the scale, sales and category management processes, saving you valuable time every day.



Hygienic Design



The stainless-steel weighing plate is easy to clean, while the scale housing is made of aluminium with impact and scratch resistant surfaces, designed to eliminate unnecessary crevices that could harbor dirt and grime.

Quality



bPlus lives up to every expectation associated with quality. Stylish design, topquality components like an incredibly fast printer and durable housing – plus all the carefully considered details combined to create a tangible difference.

Convenient Data Management



Keep firmware and configurations data up to date and optimize the operational uptime and system continuity with feature-rich and legally compliant application software. bPlus enables a convenient setup and configuration by scale configuration software or easy USB configuration loading.

Small Details. Big Difference.

bPlus is perfect for retailers who are looking to invest wisely in future proof weighing technology that will help them focus on what really matters: sales and profit. That's why every part of a METTLER TOLEDO bPlus scale is carefully engineered to provide you with outstanding benefits. The difference is in the details.

Product Benefits

- The latest features and functionalities to protect and future-proof your investment
- Durable, high-quality components for optimized equipment uptime
- Standby mode to save power
- Rapid paper roll changes
- Smart software
- Design that meets hygiene standards
- Easy integration
- Simple, economic operation

bDrive and bMobile

Supports Mobile Sales Activities

The perfect choice for retailers looking for a reliable and easy-to-use scale that has basic and advanced weighing and ticket printing functions.

www.mt.com/retail-bDrive
www.mt.com/retail-bMobile



Learn about mobile vendor scales

Download the brochure

www.mt.com/ret-vendors

bDrive



bMobile



Weighing Range	6 kg / 15 kg	15 kg	15 kg / 30 kg	6 kg / 15 kg	15 kg	15 kg / 30 kg
Graduation	2 g / 5 g	5 kg	5 g / 10 g	2 g / 5 g	5 kg	5 g / 10 g
Min Load	40 g	100 g	100 g	40 g	100 g	100 g
Operator Display	5.7-inch LCD graphics display in TFT technology, full-color with white backlighting, brightness adjustable			One line dot matrix LCD display with white backlight		
Customer Display	One line dot matrix LCD display with white backlight Text line: 16 alphanumeric characters, dot matrix line			One line dot matrix LCD display with white backlight Text line: 16 alphanumeric characters, dot matrix line		
Tower Display	Optional			Optional		
Printer	Thermal printer, Print speed: up to 100 mm/s, Max. print resolution per character: 8 × 16 dots, Roll width: 57 mm, Roll diameter: max. 68 mm			Thermal printer, Print speed: up to 80 mm/s, Max. print resolution per character: 8 × 16 dots, Roll width: 57 mm, Roll diameter: max. 68 mm		
Network and Data Transfer	802/11 a/b/g/n wireless, 10/100 Base T Ethernet, TCP/IP, USB, DHCP, Secure wireless connection due to 64/128-bit WEP encryption, WPA, WPA2, WPA-Mixed, 802.1X authentication, Automatic network connection with DHCP support, No hub required for network connection, Data transfer via USB device for item data, configuration, logos and pictures, firmware update and transaction logs			10/100 Base T Ethernet, TCP/IP, USB, DHCP, Automatic network connection with DHCP support, No hub required for network connection, Data transfer via USB device		
Dimensions (L × W × H)	539 × 529 × 258 mm			539 × 529 × 258 mm		
Service Counter	★★★★☆			★★★★☆		
Self-Service Weighing **	☆☆☆☆☆			☆☆☆☆☆		
Checkout	★★★★★			★★★★★		

Suitability for requirements: ★★★★★ very well-suited ★★★★☆ well-suited ★★★☆☆ suitable ★☆☆☆☆ limited suitability
☆☆☆☆☆ unsuitable * Basic module and CWP weighing plate

bMobile

Functional – Durable – Economical

With quick and accurate weighing and service, bMobile from METTLER TOLEDO is an economic price computing scale with a receipt printer that is designed to make your life simpler. It is a functional scale based on years of experience in leading scale technology.

► www.mt.com/retail-bDrive

Make Your Life Simpler

bMobile represents an easy-to-service solution for all mobile shops and chain stores. The scale is fast enough for your weighing requirements even during peak hours.



Functional



Convenient data mobility via USB. Access the USB host as a simple and convenient way to transfer and back-up data (e.g. item data, configuration). Operate independently from plugs and power grids with rechargeable batteries (optional).

Durable



With its aluminum-based housing construction and its stainless-steel platter, bMobile offers maximum durability, even under harsh retail environments like extreme temperatures, moisture and dust. Ensure food safety compliance with its easy-to-clean design and germ-resistant housing.

Economic



Flexibility with affordability. bMobile's basic functions include an evolving software platform, giving retailers the flexibility to add optional functions and updates precisely in line with your customized needs. Its affordable price point makes it the perfect solution for an optimized return on investment.

Enhanced Mobility

A rechargeable battery kit is optionally available, enabling stores to operate bMobile independent from a power source. The battery kit is a perfect match for market stalls and in environments affected by frequent power outages.

Product Benefits

- Compliance – Supports specific fiscal data collection according to local EU regulations.
- Customer Tare – Strengthens customer loyalty by allowing shoppers to bring their own containers.
- Optional Extra Features – Allows the scale's features to evolve with your business development.
- Data Mobility via USB – Quick and easy daily PLU price updates for mobile businesses.

bDrive

Easy to Operate – Easy to Connect

With quick and accurate weighing and service, METTLER TOLEDO's bDrive is a versatile, multi-functional counter scale with receipt printer for both store and mobile businesses. Designed for speed and durability, bDrive offers retailers enhanced, comprehensive weighing processes that will reduce customer wait times and withstand harsh environments.

► www.mt.com/retail-bDrive

Improve Your Business Capabilities

bDrive enables retailers to meet customer demand, even during peak hours. The intuitive user interface makes scale operation easy and reduces time needed to train staff.



Easy to Use



Its bright 5.7" operator display ensures readability even in bright sunlight. Active operator guidance shortens the learning curve for new shop assistants. Variable soft keys enable quick access to all options specific to an operational step.

Easy Integration



bDrive offers DHCP support automated network set-up. 2 RJ45 Perfect for mobile sales, bDrive's Ethernet interfaces can be used for a hubless Ethernet network. Its WiFi model supports infrastructure with soft access point.

Improved Sales Processes



bDrive brings you a full set of tools for keeping all your data up-to-date easily and reliably. Simply do data back-ups and price updates of your bDrive via the front USB Host – no need to bring a computer and cables to the shop.

Lower Energy Costs

bDrive reduces power consumption to <0.5 W by automatically switching to energy-saving standby mode during longer pauses between uses. A quick touch of any key is all it takes for the scale to be ready for action again.

Product Benefits



- Hygienic, stable, and regulation-compliant design is ideal for outdoor markets
- Enhanced workflow and reporting features to optimize processes
- Simple integration and customization capabilities meet evolving needs
- Light-touch keyboard and one-click key mapping shorten transaction times
- Proven and reliable scale software
- Easy network connectivity

bRite Line

Simple and Reliable

The bRite Line is made up of stylish, portable retail scales suited to a range of retail environments such as open markets, seasonal mobile businesses and smaller specialty shops.

www.mt.com/retail-bRite

	bRite Standard	bRite Advanced
		
Models	bRite Standard, compact version: 12 kg/2 g, 15 kg/5 g, 6/15 kg/2/5 g	bRite Advanced, compact version: 12 kg/2 g, 3/6 kg/1/2 g, 15 kg/5 g, 6/15 kg/2/5 g, 30 kg/5 g bRite Advanced, tower version: 6/15 kg/2/5 g bRite, weigh only version: 6/15 kg/2/5 g
Operator Display	LCD with backlight; 6-digit weight, 6-digit unit price, 6-digit total price	LCD with backlight; 6-digit weight, 6-digit unit price, 7-digit total price, 4-digit preset tare
Keyboard	32 membrane keys	32 light touch keys
Predefined Keys	16 keys: one key can store one PLU	16 keys, every key can store 2 PLU
Number of PLU Codes	50	100
Dimensions (L x W x H)	480 x 465 x 180 mm	480 x 465 x 180 mm
Stainless Steel Platter	240 x 337 mm (trapezoidal)	240 x 337 mm (trapezoidal)
Power Supply	Power adapter: 100~240VAC, 50/60Hz Battery: 6VDC/4.5AH lead-acid rechargeable battery (included)	Power adapter: 100~240VAC, 50/60Hz Battery: 6 NiMH or D-Cell batteries
Weight	Gross weight: 6.1kg / Net weight: 4.2kg	Tower version: Gross weight: 5.54 kg/ Net weight: 3.73 kg Compact/Weigh Only version: Gross weight: 5.23 kg/ Net weight: 3.42 kg
Accessories	Lead acid rechargeable battery • Plastic cover for pan • Plastic cover for housing • Deep plate	• NiMH rechargeable battery (x 6) • Plastic cover for pan • Plastic cover for housing • Deep plate • Ticket roll • RS232 POS connector • USB POS connector



Watch the bRite Video

Learn more about the capabilities of bRite by watching this video:
www.mt.com/retail-bRite



bRite Advanced Tower



bRite Weigh Only

bRite Standard

Quick – Handy – Mobile

bRite Standard is a stylish, portable retail scale suited to a range of retail environments such as open markets, (seasonal) mobile business or smaller specialty shops. Its robust yet lightweight construction, including a high quality stainless steel plate, make it perfect for these kinds of environment where food hygiene, portability and sturdiness are prerequisites.

► www.mt.com/retail-bRite

Quick Workflow

The quick price and function keys on the advanced membrane keyboard speed up the workflow and reduce operation time. An exchangeable preset card enables the user to customize the 16 preset keys.



Easy to Read



The three displayed lines are very clear and easy to read. The backlight can be switched on or off according to the ambient lighting and to save power, the scale automatically goes into the sleep mode when not in use.

Ergo Grips



Two ergonomic grips on the lower side of the scale combined with its light net weight of only 4.2 kg make it extremely easy to transport.

Smart Mobile Business



For complete mobility, the scale can run via rechargeable battery. Every scale order includes a rechargeable battery* with a longlasting operation time of up to 140 hours.

Reliable and Durable

Coupled with its high quality weighing technology, bRite is a reliable and long lasting investment. Using the scale is also fast and effortless thanks to its ergonomic keyboard layout and simple user interface – thus speeding up customer service in all applications.

Product Benefits

- Robust yet lightweight design
- High-quality stainless steel tray
- Available in compact or tower version

bRite Advanced

Robust – Fast – Flexible

bRite Advanced line has been designed to offer optimum quality for the price in order to guarantee the robustness, operating speed and accuracy you need, whatever your retail environment. The Light-Touch layer keyboard, a large 4line LCD, Ergo Grips and the integrated cable storage offer you a complete package of features rarely seen on an entry level pricecomputing scale – ensuring that it stands out from the crowd.

► www.mt.com/retail-bRite

Fast Operation

Innovative bRite keypad technology delivers advanced weighing and signal processing for extremely fast operation. The keysheet layers can be exchanged for optimum hygiene and cost efficiency.



Direct Control



Four display lines – including an extra line highlighting preset tares – are clear and easy to read in all conditions. The backlight can be switched on or off and to save power, the scale automatically goes into the sleep mode when not in use.

Connectivity



bRite Advanced line can be connected to an external printer or an electronic cash register. Printing tickets and reports in five languages are standard features of bRite Advanced.

Clever Mobile Business



For complete mobility, the scale can be powered by both rechargeable NiMH batteries or standard size D commercial batteries at the flip of a switch.

High Accuracy and Compliant

This high precision weighing instrument complies with highest industry standards, including 10V/m OIML regulations. Features like the power adapter with Power Efficiency Level V and RoHS compliant components also demonstrate our commitment to electronic safety, accuracy and environmental care.

Product Benefits

- Optimum price-performance ratio
- Fully-featured weighing technology
- Reliable performance
- Robust and mobile
- Modern design is handy and stable

Checkout Scales and Displays

	Page
Ariva Line	52–53
Ariva Display Options	54–55
Ariva	56–57

Ariva Line

Optimized Service at Checkout

Ariva checkout scales combine fast weighing processes with high operating convenience, ensuring a positive customer shopping experience.





www.mt.com/retail-ariva



Smooth Sailing at the Checkout

Find out more about the models in the Ariva Line and download the Ariva Checkout Line brochure:

www.mt.com/retail-ariva-bro

	Ariva-B Dual-interval scale for integration into bioptic scanners.	Ariva-H Dual-interval scale for integration of horizontal scanners.	Ariva-S Dual-interval scale for checkouts without scanners.	Ariva-S-Mini Dual-interval scale for checkouts without scanners.
				
	<ul style="list-style-type: none">• Outstanding speed• For checkouts with consistently high customer presence or distinct frequency peaks• Ideal for staffed checkouts and self-service checkouts in grocery stores, as well as heavily-frequented service counters with checkout ability	<ul style="list-style-type: none">• Flatter checkout area• For checkouts with limited space or special design requirements• Ideal for checkouts at delicatessens, self-service checkouts in supermarkets, as well as service counters with a cash register connection	<ul style="list-style-type: none">• Fast price-computing weighing at the POS• Ideal for specialist stores, company canteens, cafeterias, self-service restaurants, food trucks, small grocery stores and market stalls, salad and snack bars in supermarkets, and as control scales in fresh food departments	<ul style="list-style-type: none">• Fast price-computing weighing at the POS• Minimum space requirement – the smallest checkout scale in its performance class• Similar to Ariva-S, it is ideal for lighter, expensive products thanks to its particularly fine weight resolution
Weighing Range	6 kg / 15 kg	6 kg / 15 kg	3 kg / 6 kg	3 kg / 6 kg
Graduation	2 g / 5 g	2 g / 5 g	1 g / 2 g	1 g / 2 g
Min Load	40 g	40 g	40 g	20 g
Dimensions (L × W × H)	292 × 102 mm (W × H), Length depending on the scanner model	399 × 292 × 106 mm (installed) 342 × 282 mm (weighing plate)	280 × 316 × 58 mm (table-top version) 276 × 327 × 58 mm (opt. installation option)	160 × 200 × 50 mm
Interfaces	RS-232, USB 2.0, adapter cable for cash register connection (optional)	RS-232, USB 2.0, adapter cable for cash register connection (optional)	RS-232, USB 2.0, adapter cable for cash register connection (optional)	RS-232, USB 2.0, adapter cable for cash register connection (optional)
Supported scanners	Datalogic MAGELLAN™ 9900i / 9800i / 9600i / 9400i / 9300i / 8400 Honeywell Stratos™ 2700 NCR RealScan™ 74 / 79 Zebra Technologies MP7000 / MP72	Datalogic MAGELLAN™ 2300HS / 3550 HSI NCR RealScan™ 84 Zebra Technologies LS7808	–	–

Ariva Display Options

Informative – Clear – Transparent

Perfectly tailored to specific checkout needs – the Ariva Line provides price, weight, and product displays for checkout scales.

► www.mt.com/retail-ariva

VCODisp. Virtual Checkout Display



The VCODisp software module brings more space and clarity to the checkout area. Checkout and weighing information is displayed with VCODisp on the cash register monitor; a separate weighing display is not required. Installed Ariva scales can be retrofitted with VCODisp.

- Free positioning of the VCODisp window on the cash register monitor
- Text, frame, and background colors can be set individually
- Long-term display of the weighing information is possible
- Taring and zeroing via scanner, optional touch buttons on the VCODisp window or keypad

Single-line Weight Display



The display without price-computing enhances the Ariva checkout scale with a single-line weight-only display. Large numbers, an anti-glare screen, and a backlit display – which switches off when unused to save energy – ensure good readability.

- Bright, backlit 7-segment display in LCD technology
- Energy-saving function
- 5-digit weight display
- Keys for taring and zeroing
- Contrast ratio 100:1

Four-Line Price and Weight Display



Immediate price certainty with every single scanning process: the price-computing display lists the weight, unit price, and amount. Large numbers, an anti-glare screen, and a backlit display – which switches off when unused to save energy – ensure good readability.

- Bright, backlit 7-segment display in LCD technology
- Energy-saving function
- 5-digit weight display
- 6-digit display for unit price
- 6-digit display for amount
- 4-digit display for tare
- Keys for taring and zeroing
- Contrast ratio 100:1

Simplicity and Efficiency



Find out more about the optimized processes of a Chinese customer using the Ariva checkout scales:

► www.mt.com/retail-euomart

Alphanumeric Convenient Display



Boosts customer confidence and convenience: the alphanumeric display with LCD technology shows the item name as well as the weight, unit price, and amount. Its diverse installation and upgrade options make it ideal for customizing to the specific requirements of each checkout area.

- High-contrast, backlit 7-segment display in LCD technology
- Alphanumeric dot-matrix display for text (product names with up to 21 characters)
- High viewing angle stability
- Installation options: stand adjustment, second display, adapter for SpacePole®
- Contrast ratio 250:1

Ariva

Fast – Precise – Durable

Ariva checkout scales and their outstanding transaction speed allow food retailers to offer optimized service in traditional checkout areas and at individual checkouts. Customers benefit from fast weighing and operating processes at checkout, while also ensuring high operating convenience for employees.

► www.mt.com/retail-ariva

Seamless Model Range

The right solution for every checkout: the Ariva Line includes scales for integration into bioptic laser and image scanners, where speed is key; horizontal scanners in environments with limited space; and stand-alone scales without scanners – such as those used in specialty shops.



Outstanding Speed



Ariva checkout scales only take 70 milliseconds to weigh and exchange data with the checkout application. This makes Ariva so fast that checkout staff can seamlessly integrate weighing and scanning.

Fine Weight Resolution



All Ariva scales have dual-interval support for high-precision weighing results. The automatic switching is based on the weight of the item. It minimizes tare losses and ensures compliance with any statutory provisions.

Extremely Durable



Resilient, easy-to-clean surfaces and comprehensive protection against unintentional mechanical damage: all scales in the Ariva Line are designed for continuous high use across their entire service life.

Simple Integration

Ariva scales support market-leading scanners. They are compatible with many third-party provider checkout and POS applications, which require access to the weighing information. The USB interface and power supply via the scanner make it easy to connect to the checkout.

Product Benefits

- Fast weighing at checkouts
- Seamless model range
- Easy integration and commissioning
- Standard software across the entire scale line
- Durable design for high usage
- Dual-interval technology for higher weight resolution for light products
- Numerous display options

Wrapping and Price Labeling

	Page
FreshPack and 840	60–61
FreshPack	62–63
840	64–65



FreshPack and 840

Weighing – Wrapping – Labeling

No two retail backrooms are the same. METTLER TOLEDO’s weighing, packaging and labeling solutions give retailers the flexibility to meet any volume required by your particular backroom needs. From automated to manual operation, you select the equipment configuration that ensures maximum cost-effectiveness and provides essential backup throughout the business cycle.

► www.mt.com/retail-backroom



Backroom Production

Production Efficiency

Met Backroom Solutions

Learn more about Weighing and Labeling in the Backroom

Download the Backroom Competence Brochure:

► www.mt.com/retail-backroom

**FreshPack
Automatic Weigh
Labeler**



**840
Manual Label Printer**



Weighing Range	6 kg	0 kg – 15 kg / 15 kg – 30 kg
Graduation	2 kg	2 g – 5 g
Weighing	Automatic	Manual
Packaging	N/A	Manual
Labeling	Automatic	Manual
Printer	Direct thermal printing	High resolution
Label Sizes in mm	Width min : 35, max : 80 Length min : 30, max : 100	Width: min : 20, max : 80 Length: min : 20, max : 150
Packaging speed	25 packages per minute	N/A



FreshPack Automatic Weigh Labeler



840 Manual Label Printer

FreshPack

Fast – Durable – High-Quality

The METTLER TOLEDO FreshPack weighing & labeling solution is the ideal tool for highproduction laboratories. Robust, intuitive, and fast, FreshPack weighing and labeling system ensures high-quality packaging while improving backroom process efficiency.

www.mt.com/retail-backroom

Improved Efficiency
With its stop-and-start weighing system located at the front of the machine, the FreshPack automatic weigh labeler enables control over production timing and speed.



FreshPack



Accurate and Precise



Thanks to its METTLER TOLEDO stop-and-start weighing system, the FreshPack ensures consistent and accurate weighing of all your products up to 6 kg.

Boost Productivity



With a speed of 25 packs/min and the ability to apply stickers automatically, the FreshPack allows you to save significant time and productivity in your backroom.

Durable and Hygienic



With its robust and simplified design, the FreshPack enables a streamlined cleaning process and easy maintenance for operators. This improves hygiene and boosts equipment uptime.

Optimize Your Product Displays

The additional “Pop” printer allows you to print logos on rolls of blank stickers in different colors, allowing you to customize your logos and communicate effectively with your customer. The user interface is simple and intuitive, ensuring optimal presentation of your store’s product displays and boosting sales.

Product Benefits

- Modularity – the “Pop” printer can be added to the system very easily
- Intuitive user interface – touchscreen and mechanical keyboard
- Perfect hygiene – Easy to clean
- Easy to change tray conveyor belts

840

Practical – Intuitive – Streamlined

Developed for small to mid-size retail operations, the 840 Manual Label Printer is an ideal addition to any operation – even in the largest and busiest prepack backrooms. The 840 Manual Label Printer is easy to use and saves space, time and money.

► www.mt.com/retail-backroom

Designed for Your Backroom Operations

Every purchase of an 840 Manual Label Printer includes a comprehensive and proactive maintenance and servicing plan. With maintenance dates set during planned downtime, the system is always up and running during day-to-day operations. This approach ensures a long service life of the device and supports optimal uptime.



840



High-Performance Printer



With a print speed of 150 mm/s, the METTLER TOLEDO 840 Manual Label Printer is designed for large labeling volumes. The high-definition thermal printer ensures quality printing of your texts and logos.

Intuitive Operation



Equipped with a 12.1" color touchscreen, the METTLER TOLEDO 840 Manual Label Printer guides operators and requires only one step minimum training. A tilting touchscreen provides comfort and ergonomics for operators.

Data Management



The 840 Manual Label Printer provides complete management of your shelf: manufacturing, traceability, allergens and nutritional information. It is easily integrated into the backroom and can be equipped with a barcode scanner.

Complementary and Easy to Use

The METTLER TOLEDO 840 Manual Label Printer is the ideal choice for packaging your fresh products in the backroom for your self-service shelves. It can be integrated into a manual packing table to optimize the production station and streamline prepack operations.

Product Benefits

- Intuitive operation – Reduced training costs
- Durable construction
- High print speed – Perfect for high volumes
- Quality labels – High definition graphic printer
- Easy repair and maintenance
- Can be managed with METTLER TOLEDO RetailSuite

Software and Scale Management



	Page
RetailSuite – Module Review	68–69
METTLER TOLEDO RetailSuite	70–71

METTLER TOLEDO RetailSuite

The Modules at a Glance

Reduce operating costs, simplify inventory management and ensure availability – convenient data, software, and configuration management with the RetailSuite.

www.mt.com/retail-suite



A Centralized, Cloud-Based Solution

Read about how a Dutch customer is benefiting from the RetailSuite:

www.mt.com/retail-spar

DistributionServer



The DistributionServer is the central RetailSuite module that controls and monitors the software, patch, and data distribution of different weighing solutions and wrapping devices.

- Convenient device management: automatically identify terminals and assign these to branches
- Simple connection of scales via drag-and-drop assignments
- Establish remote connections
- Notifications and status requests of terminals, event-controlled notifications
- Live monitoring
- Precise advance planning and scheduling of upcoming tasks with the Task Scheduler

WorkBench



WorkBench expands the RetailSuite with a tool that allows food retailers to easily and conveniently manage the touch assignments of the scales and make adjustments with just a few mouse clicks.

- Central maintenance of the touchscreen layouts and rapid modification of the touch assignments
- Easy adjustments to the depth and breadth of the fresh food range
- Convenient updating of the preset keys
- Local changes to the touch assignment (e.g. for branch-specific or sold-out offers)
- Branch-specific customization of the touch assignment across the device's entire service life

DisplayManager



The RetailSuite's DisplayManager gives retailers an easy-to-use tool for utilizing customer display screens and TVs as attention-grabbing advertising areas at the POS.

- Advertisements at fresh food counters for perfectly timed purchase incentives at the POS
- Create and develop playlists: dwell times, sequence and transitions, high-margin cross-selling links
- Assign playlists to the prepared play channels
- Customer queue management via scale screen
- User-friendly operation does not require any IT skills for scale management

GateWay



GateWay ensures the connection of METTLER TOLEDO network scales to the logistical goods management and the ERP system and supplies the devices with all centrally maintained product and master data.

- Secured data consistency thanks to central master data management
- Complete transparency of all records in supply and disposal
- Simple integration via web services
- Device-, branch-, and area-specific provision of the data
- High operating reliability and low system requirements
- Automatic enrichment through flexible scripting

METTLER TOLEDO RetailSuite

Simple – Flexible – Economical

The METTLER TOLEDO RetailSuite gives food retailers the security of flexible scale management across the entire lifecycle of the devices. The modular software suite ensures seamless connection of scale infrastructure to goods management and simplifies the distribution, maintenance, and updating of data.

► www.mt.com/retail-suite

Efficient scale management

Whether implementing software updates, adjustments to key assignments in the touch layout, new label requirements, or updating offers and campaigns advertised on the customer screens, the RetailSuite administers all of the desired changes with just a few mouse clicks – perfectly aligned to the store, branch, and workplace.



Central Data Distribution



The RetailSuite eliminates expensive, time-consuming duplication of work in master data maintenance. The software reliably exchanges data between the ERP system and the scales and wrapping machines in the branches.

Easy to Operate



The RetailSuite manages the scales across the departments in a single software suite. Whether marketing, IT helpdesk, or category management, the functionality and user interface of every module are aligned to the user's everyday requirements.

Low Total Costs of Ownership



The RetailSuite increases device availability and minimizes downtimes caused by software maintenance. Central software distribution and powerful remote maintenance options give food retailers considerable time and cost benefits.

Quick and Versatile

The DistributionServer is the centerpiece of the software suite. The module ensures rapid branch network integration and commissioning of newly installed scales, as well as rapid provision of application and configuration changes in the existing network. An integrated scheduler enables precise scheduling of all activities.

Product Benefits

- Flexible scale management
- High stability and availability
- Minimum costs when installing additional devices
- Consistent transparency and data homogeneity
- Rapid distribution of new functions and updates (e.g. LMIV, label layouts)
- Fast remote maintenance in case of disruption

Service



	Page
Service Solutions	74
Preventive Maintenance	75

Service Solutions

Food Retail Partner

METTLER TOLEDO Service knows what fulfilling your specific business requirements depends on. Take advantage of the market leader’s expertise and experience, and secure the optimal availability and maximum performance of your devices with our services.

The METTLER TOLEDO installation services ensure that your new devices are ready for use on time and generate outstanding results in the areas of productivity, quality, and performance from the very first day. The function of all your devices is covered by the METTLER TOLEDO warranty for the first year. Reasons to choose the Extended Care package for your company:

- Fast service
- Higher availability of your devices
- Better performance
- More savings

Extended Care includes all travel, labor, and spare part costs for the first 24 months after the installation of the device. You also receive priority access to our technical hotline.

You can find more information on our retail service offerings at:
▶ www.mt.com/retail-service

Preventive Maintenance

Ensure Precision and Reliability

The METTLER TOLEDO Care Packages ensure maximum availability and optimal performance for a fixed price. You receive preferential access to our extensive expertise and decide on a complete solution for your hardware and software maintenance – with complete cost control and certainty.



Important Services at a Glance

We offer a wide range of services for your weighing technology – customized to your requirements.

Extended Warranty



- Extended Care
- Preventive maintenance
- Technical hotline support

Service Care Contracts



- BasicCare
- StandardCare
- ComprehensiveCare
- SoftwareCare

Calibration and Certification




- Compliant commissioning and calibration
- Timely compliance with all calibration dates

	BasicCare	StandardCare	ComprehensiveCare	SoftwareCare
Preventive Maintenance <ul style="list-style-type: none">• Inspection and cleaning of all mechanical components• Inspection and testing of all electronic components• Inspection for wear and tear	•	•	•	
Check for correct functioning of the device	•	•	•	
Preferred treatment in service matters	•	•	•	•
Discount on labor costs for repairs	•			
Hotline access for technical support		•	•	•
Covers labor costs for repairs in case of device malfunction		•	•	
Spare parts (not including wear parts)			•	
Remote Support <ul style="list-style-type: none">• Support via telephone, email, chat, and/or remote access tools• Fast response times and troubleshooting• Minimal interruption of the normal course of business				•
Software Evaluation <ul style="list-style-type: none">• Software updates for new features and compliance requirements• Better system availability				•
Calibration and Check	Takes place in accordance with the applicable local regulations and provisions			

Retail Expertise Library – Knowledge Portal

A comprehensive, one-stop resource portal: catalogs, brochures, data sheets, operating instructions, white papers, guides, manuals, case studies, magazines, User Com, webinars, videos, installation descriptions, certifications, and much more. See for yourself!

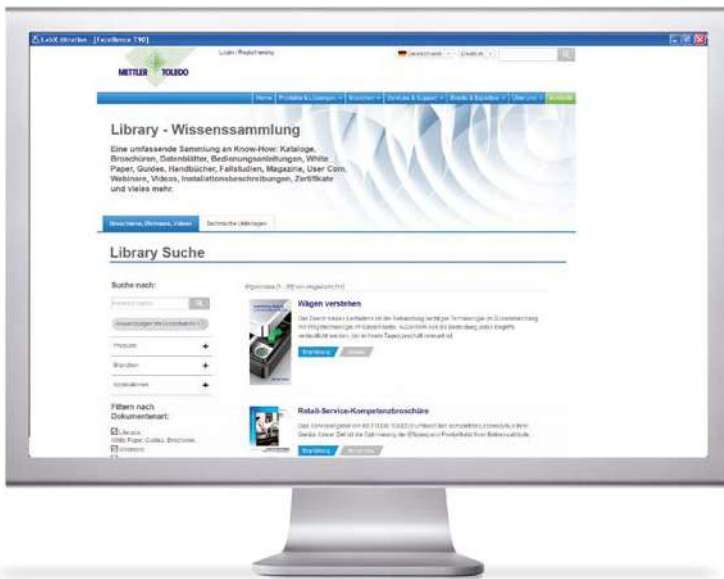

► www.mt.com/retail-library

www.mt.com/retail

For more information

METTLER TOLEDO Group

Retail Division

Local contact: www.mt.com/contacts

Subject to technical changes

©04/2025 METTLER TOLEDO. All rights reserved

Document no. 30399418 D

Global MarCom RITM1330611 X/JS